


Edge Trims

Step by step guide on installing Rubber Roofing edge-trims to your next EPDM Roofing project.


1

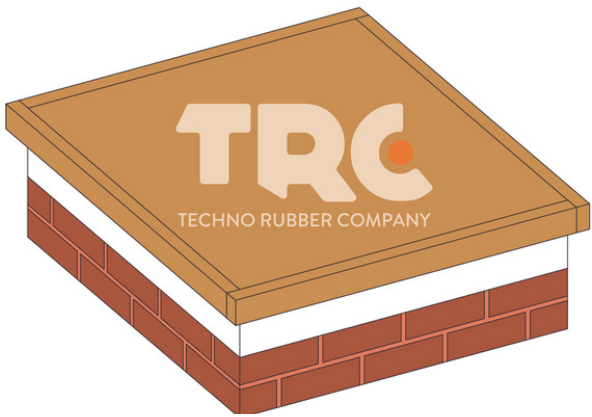

Step 1

Install a 2" x 1" batten to the roof perimeter, level with roof deck.


2

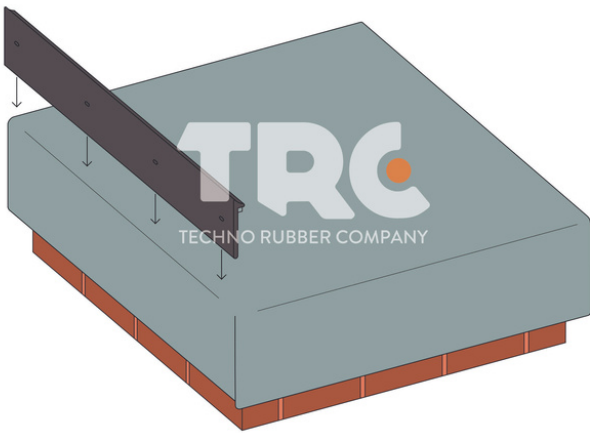

Step 2

Once the membrane is installed, push down on the edge trim.


3

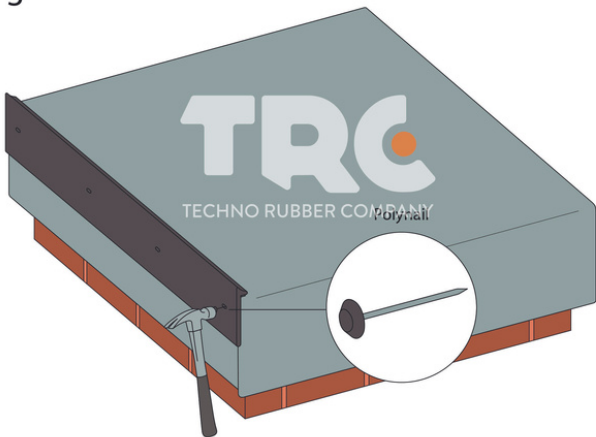

Step 3

Fix in place using the supplied polypins.

4

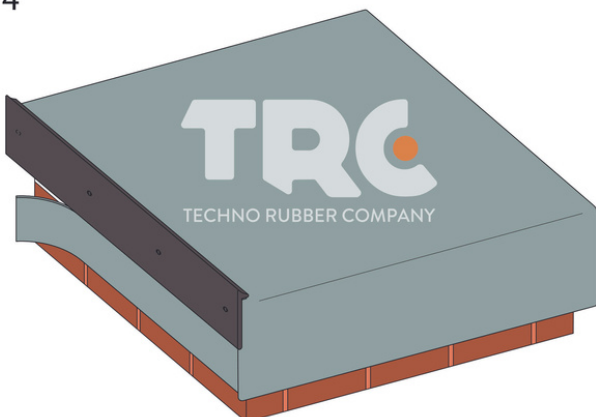

Step 4

Trim any excess rubber with a sharp blade.

Cross section

