


Gutter Trim

Step by step guide on installing gutter-trims to your next EPDM Roofing project.


1

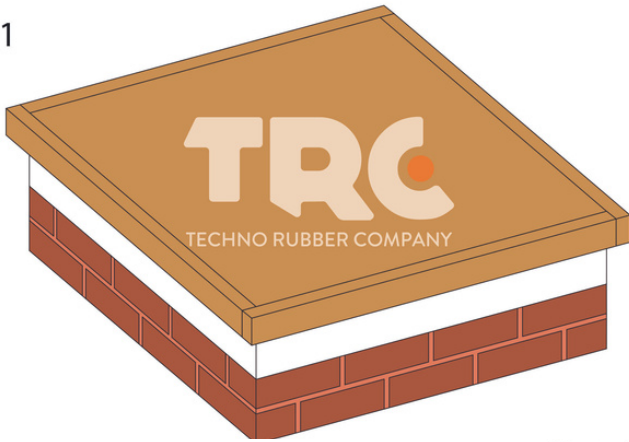

Step 1

Install a 2" x 1" batten to the roof perimeter, level with roof deck.


2

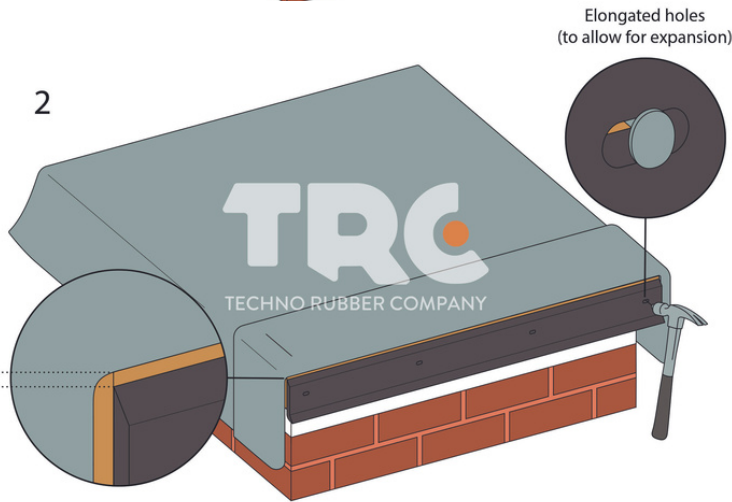

Step 2

Install the base plate as shown, 5mm below the deck using plain nails.


3

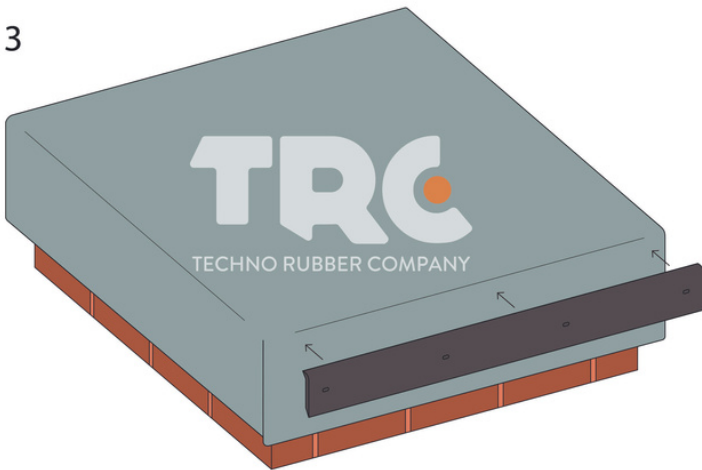

Step 3

Adhere membrane and dress over the base plate.


4

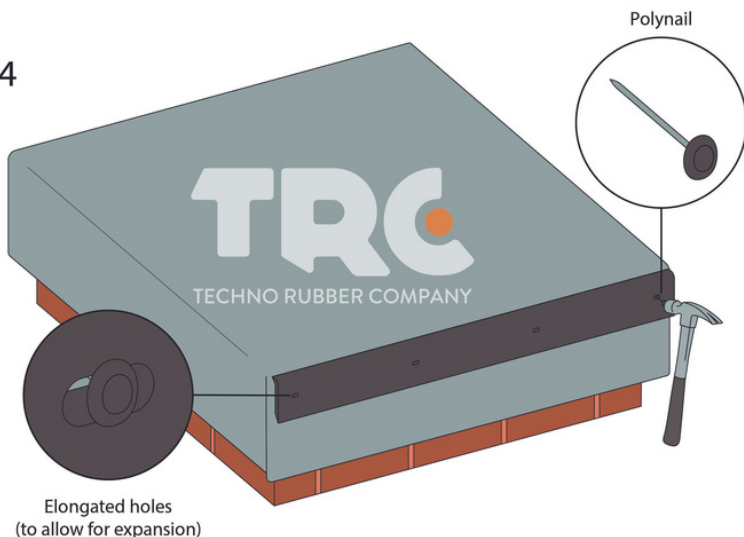

Step 4

Pull rubber taut and install top plate as shown, secured with polynails.


5

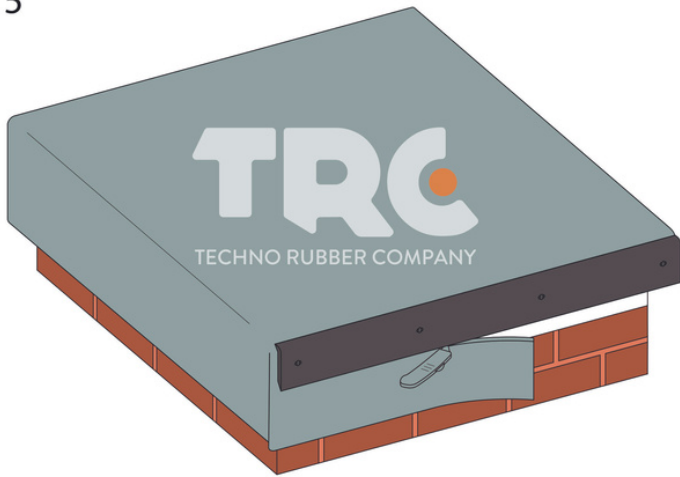

Step 5

Trim any excess rubber with a sharp blade.

Cross section

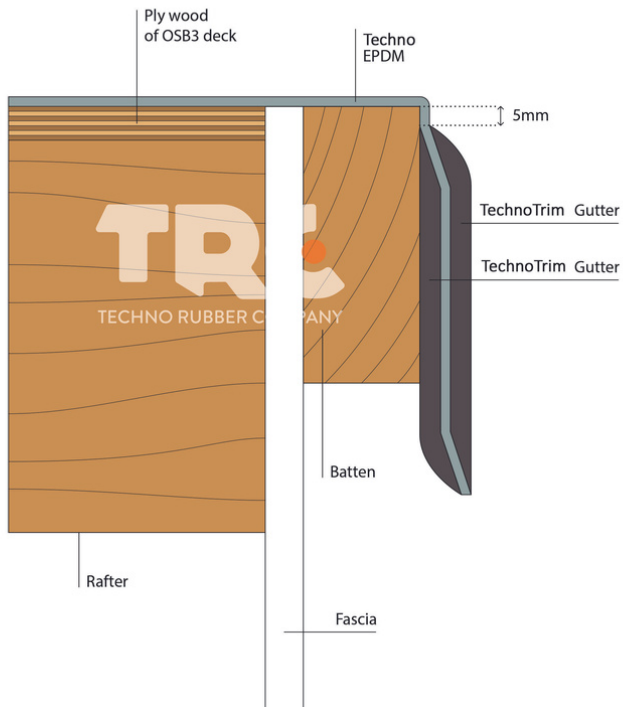

Step 6

Please allow a 5mm gap between trims for expansion and contraction.