


Internal Corner

Step by step guide on installing an internal corner to your next rubber roofing project.


1

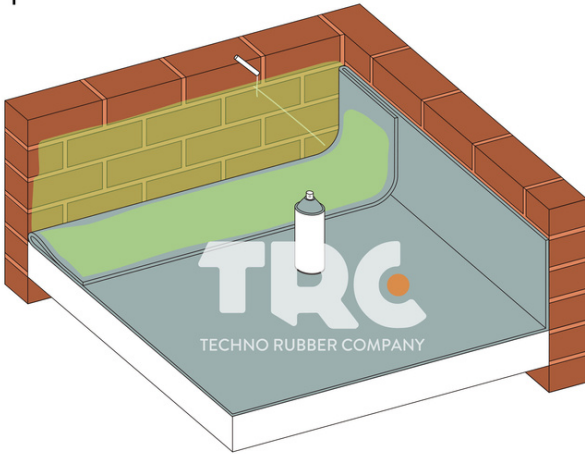

Step 1

Adhere one of the upstands and apply contact adhesive to the remaining rubber and upstand as shown. Draw a 45-degree line from the corner outwards.


2

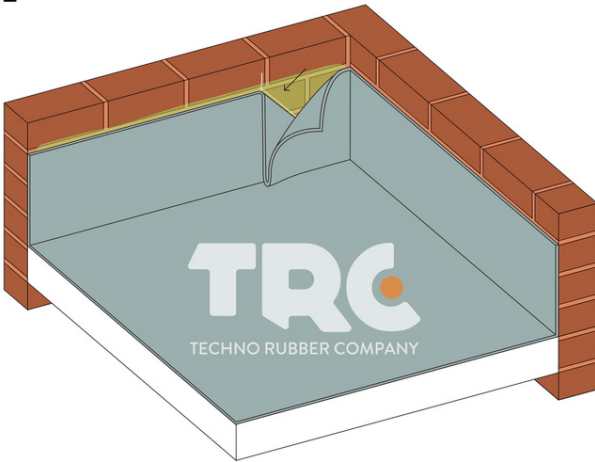

Step 2

Once dry, mate the EPDM as shown, up to the line. Fold the remaining section of rubber to form a neat triangular flap that will neatly dress into the internal corner.


3

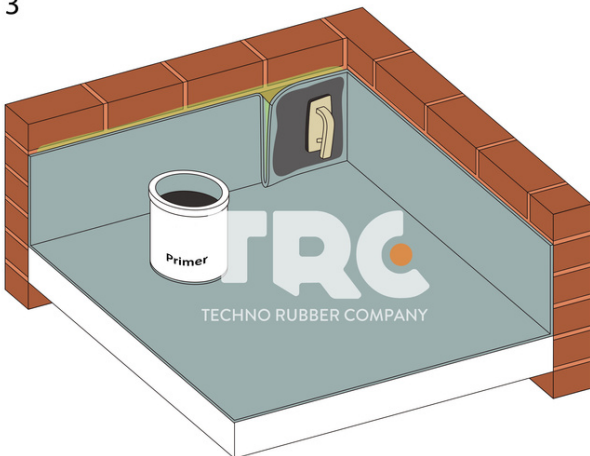

Step 3

Apply primer with a quick scrubber pad and handle, allow to dry.

4

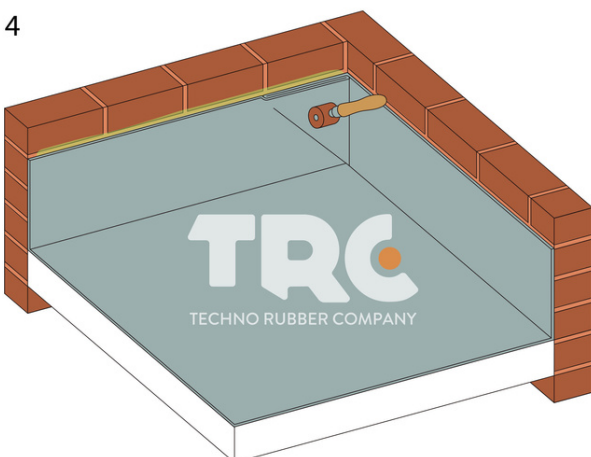

Step 4

Mate the surfaces together and roller.