



Onto Tiles

Step by step guide on installation EPDM membrane onto tiles.

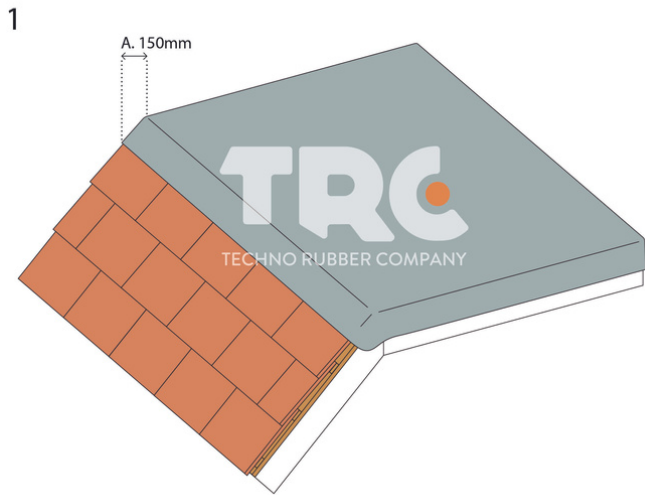


Step 1

Allow 150mm overhang onto tiles.

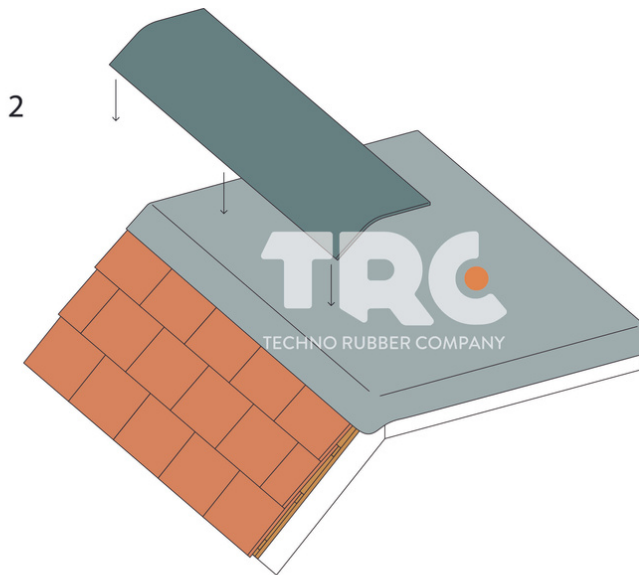


Step 2

Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.

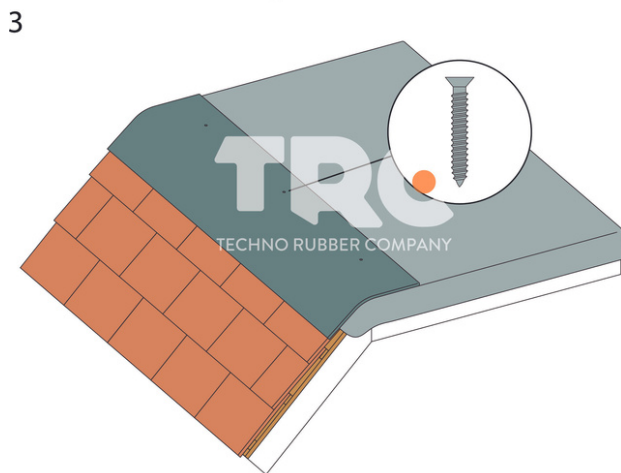

Step 3


Fix into position using screws.

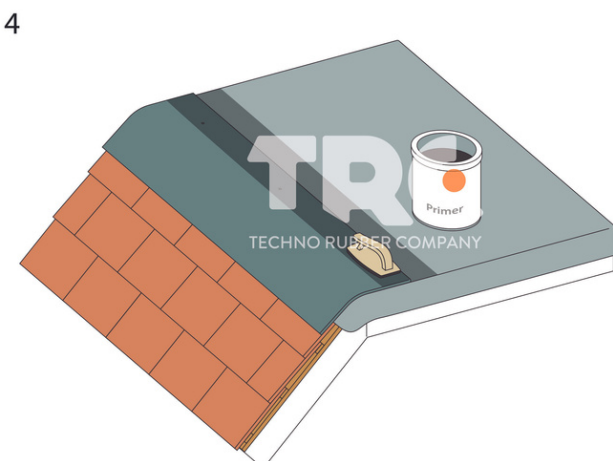

Step 4

Apply Primer to lead and rubber approx. 160mm wide using scrubber pad and handle. Allow to go touch dry.

5

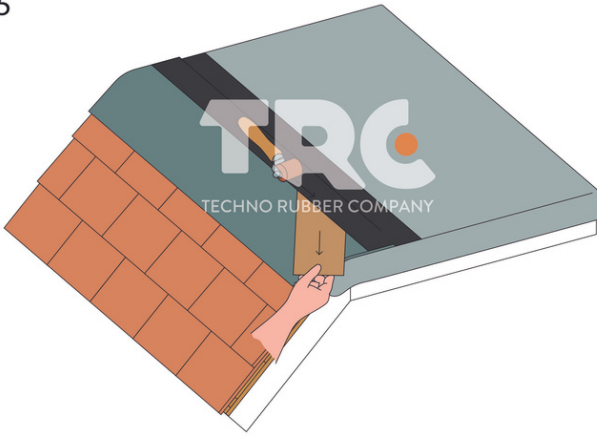

Step 5

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use silicone roller to seal.

Cross section

