



Under Tiles

Step by step guide on installing our Techno EPDM membrane under tiles/sales for your next rubber roofing project.

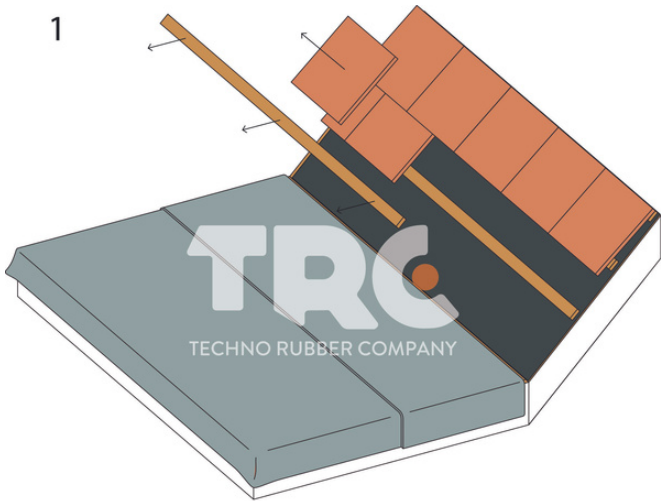


Step 1

Carefully remove tiles and battens and place to one side.

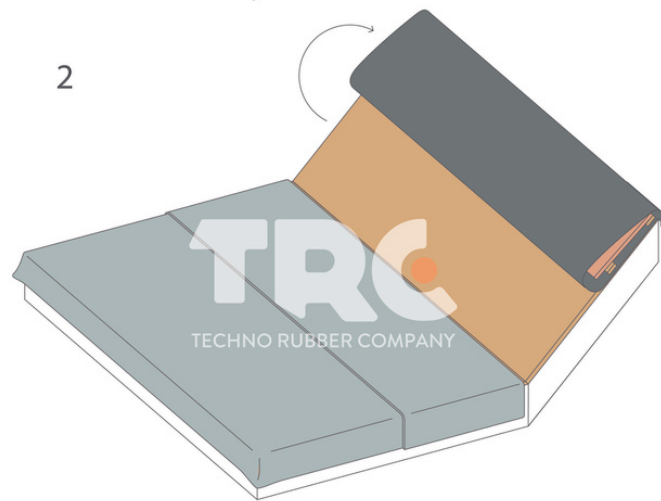


Step 2

Fold the felt underlay up and tuck under existing tiles.

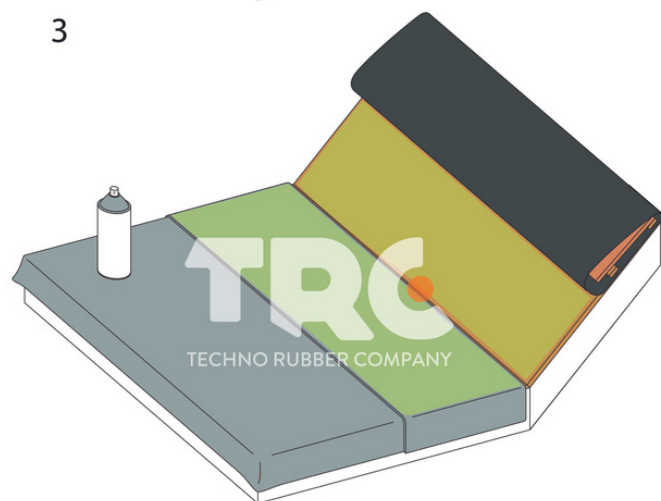

Step 3


Apply a thin coat of contact adhesive to the rubber membrane and lay board.

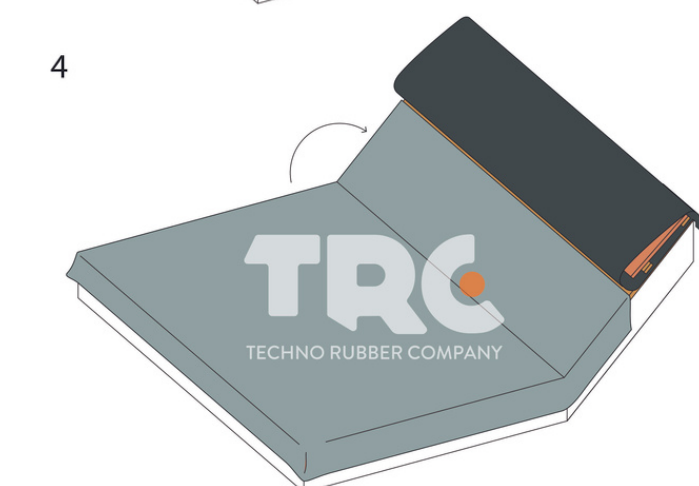

Step 4

Allow both surfaces to dry and, starting from the bottom, mate together, working the rubber into any angle changes.


5

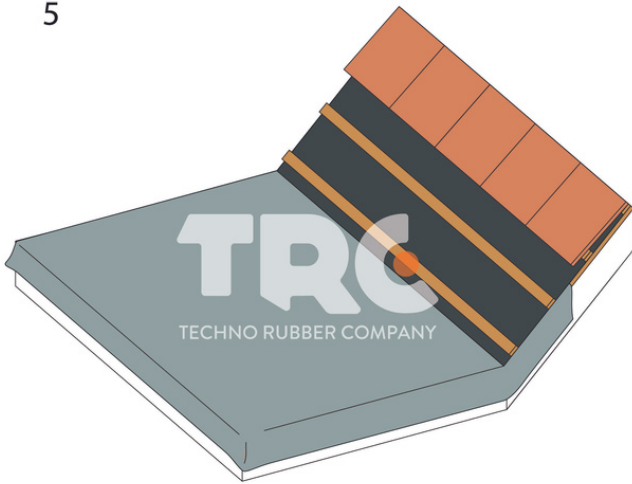

Step 5

Reinstate the felt underlay and battens over the rubber.

6

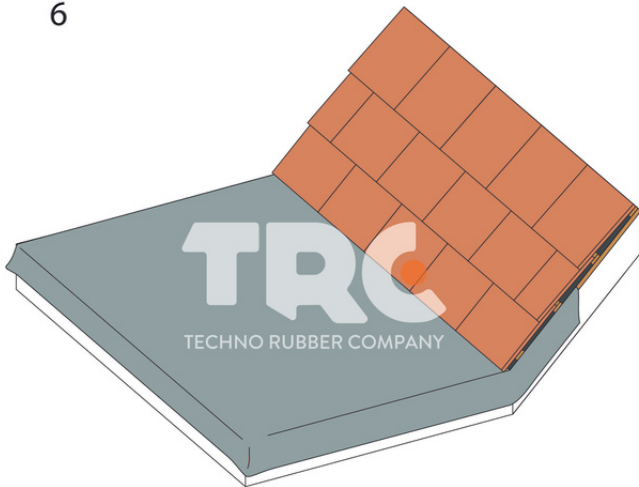

Step 6

Reinstall the tiles.

Cross section

