


Wall Trim Flashing

Step by step guide on installing wall-trim flashing to your next EPDM Roofing project.


1

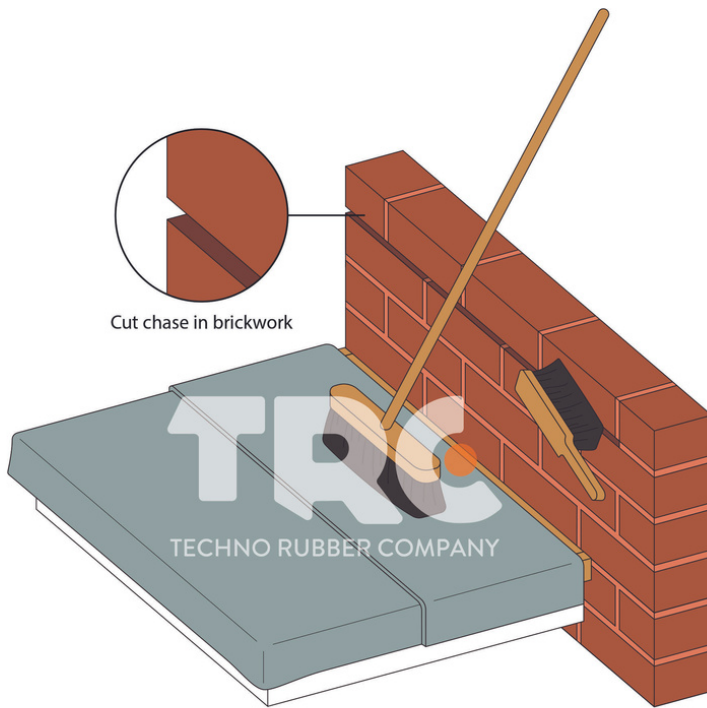

Step 1

Thoroughly clean the wall, chase and rubber.


2

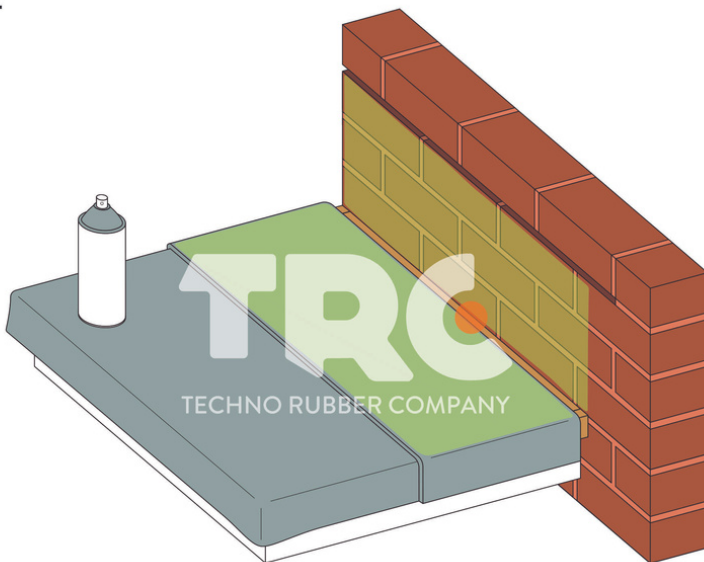

Step 2

Apply a thin coat of contact adhesive to the rubber and the wall .


3

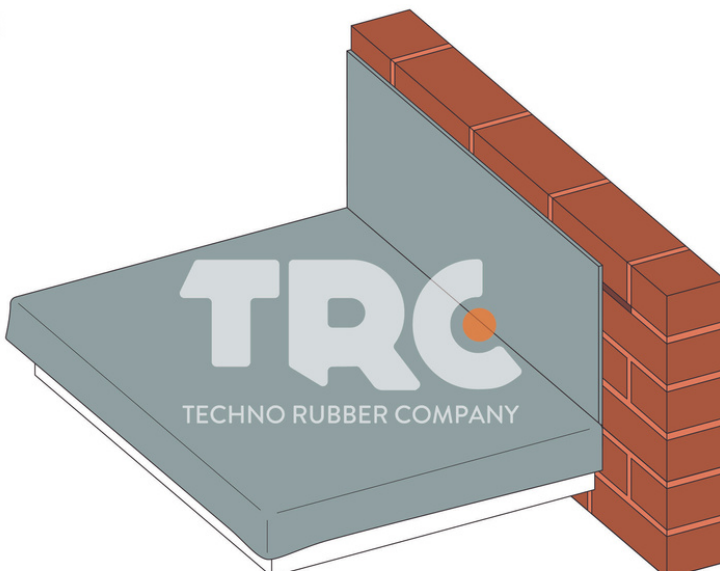

Step 3

Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.


4

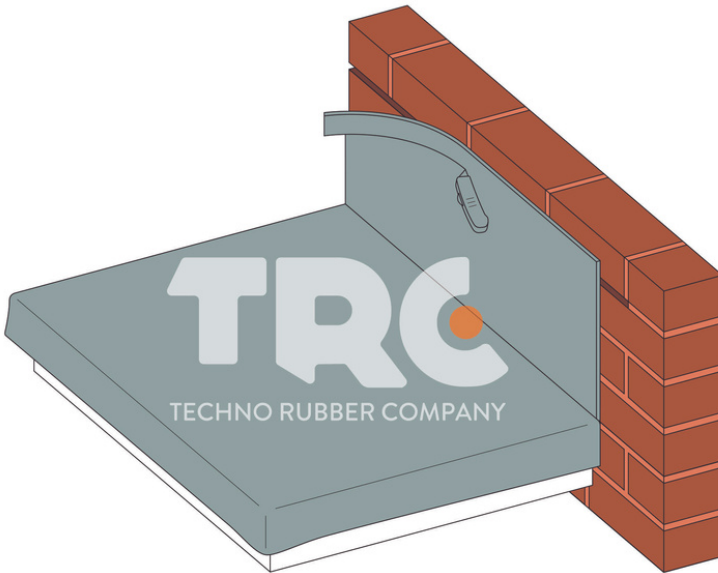

Step 4

Trim membrane.


5

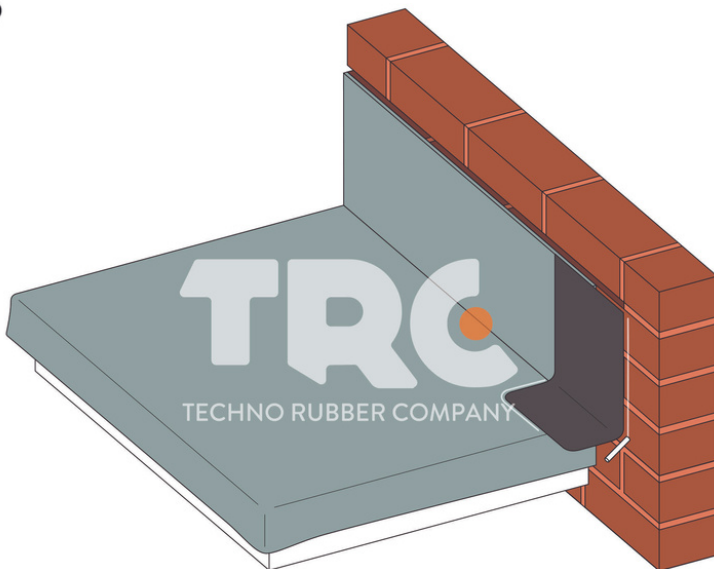

Step 5

Position a piece of 9" Flashing tape or a Detail Kit as shown and mark the perimeter, allowing an extra 1 cm.


6

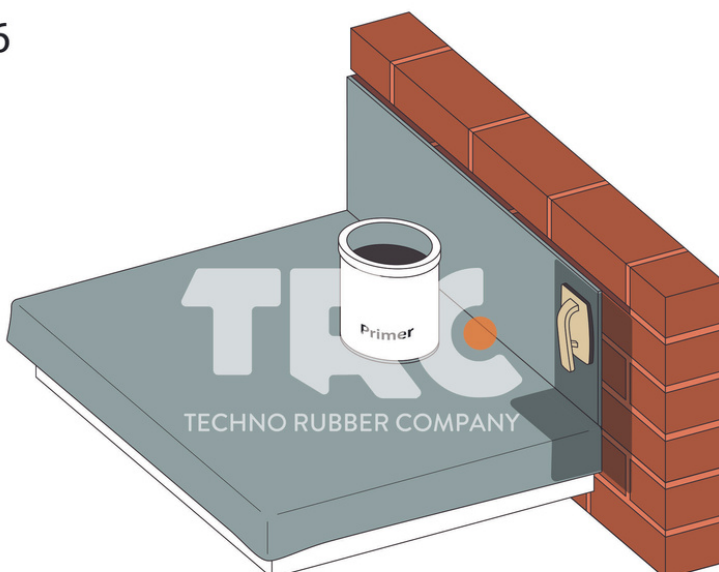

Step 6

Apply Primer to the marked area using a Scrubber pad and handle, allow primer to dry.


7

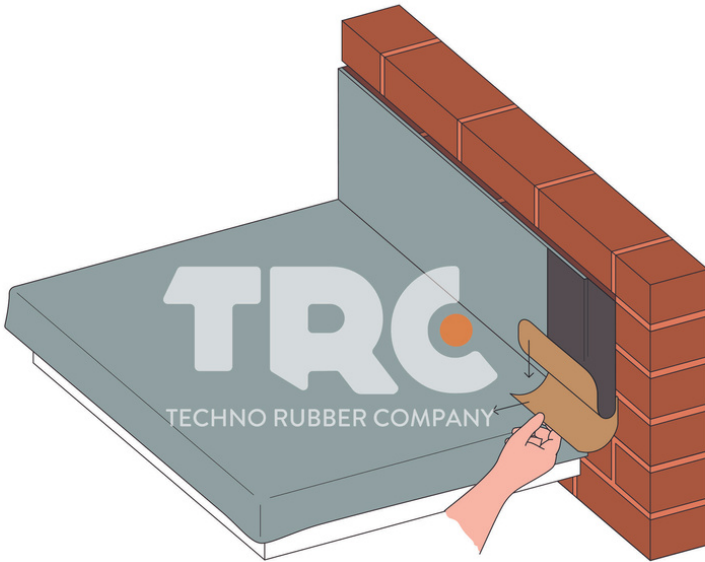

Step 7

Peel back a section of backing paper and, starting from the top, slowly work downwards as shown.


8

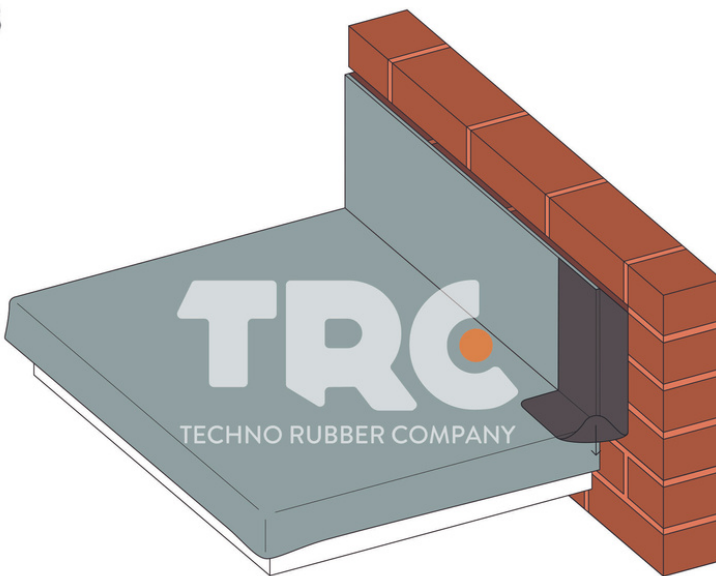

Step 8

Apply a gentle heat source to the corner if needed.


9

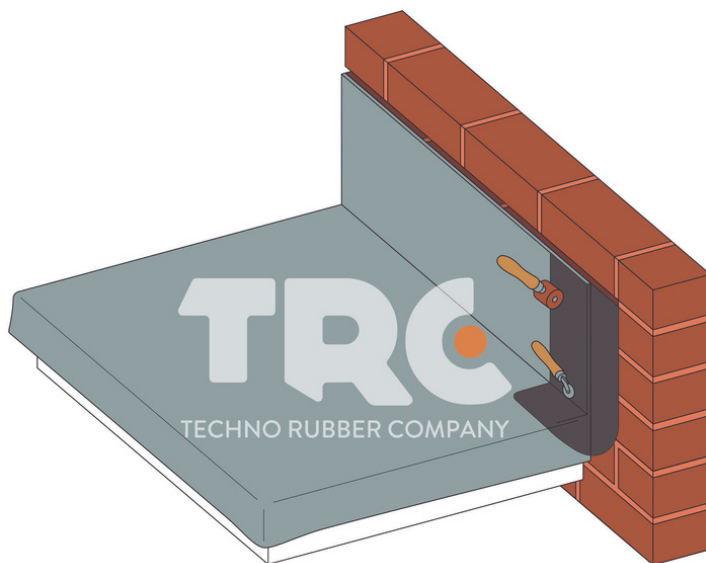

Step 9

Thoroughly roller with Silicone and Penny Rollers.


10

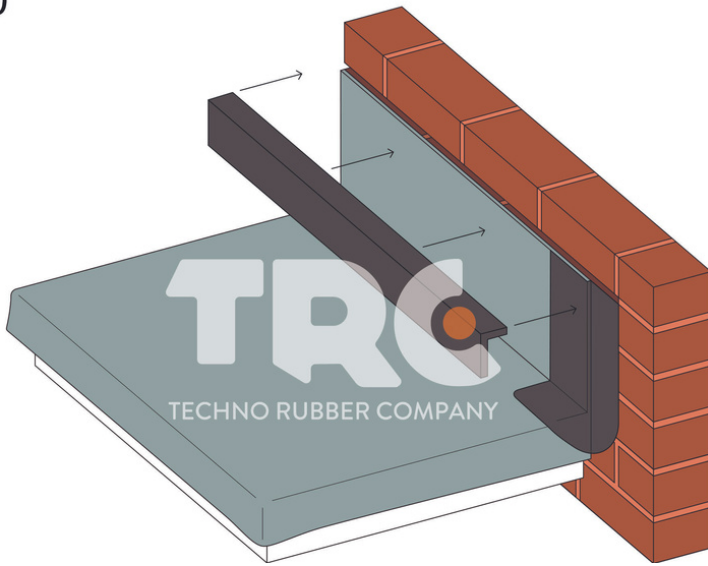

Step 10

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Rawplugs are not needed if a 5.5mm masonry drill bit is used.

11

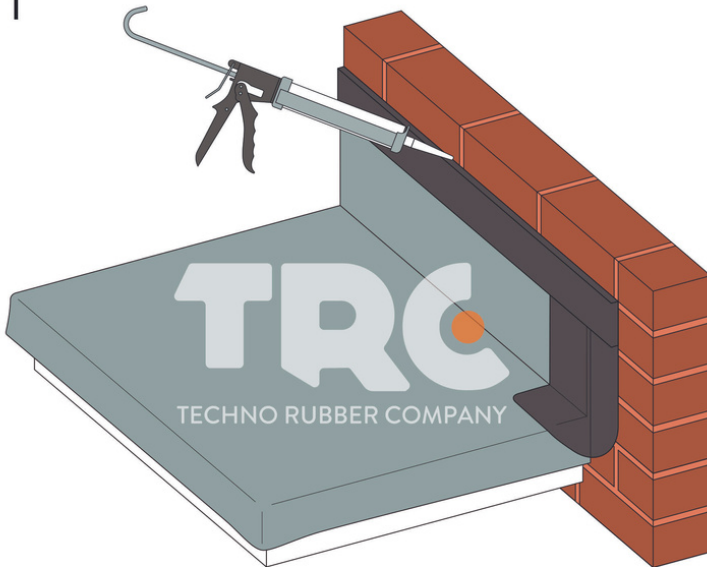

Step 11

Thoroughly seal chase with Wall Mastic.